



## Yeti Infinity Link User Guide



The Infinity Link is a mechanism built for YETI by FOX. All technical inquiries about the mechanism, including warranty should be directed to YETI.

YETI CYCLES

<http://www.yeticycles.com/>

621 Corporate Circle, Unit B

Golden, CO 80401

T. 888.576.9384

F. 303.278.6906

The Infinity Link is protected by YETI patents US 7722072B2, 8696008B2, 8272658B2, and 9821879B2.

Maintenance of the link is dependent on usage and environmental conditions.

The only service to perform on the mechanism is to keep the exterior clean and to re-grease.

Service Intervals	
Dry/Dusty Conditions	75-100 hours
Excessive Mud, Dust, or Frequent Washing	25-50 hours
Minimum Service Interval*	10-15 hours

\*Servicing the Yeti Infinity Link more frequently than this is excessive, messy, and unnecessary.

**Do Not** disassemble the Yeti Infinity Link. The Yeti Infinity Link is built with some preload on the shaft bearings which is required to keep the mechanism free of play. The leverage ratio between the wheel and link movement is so great that any friction felt between the shafts and bearings can be considered insignificant.

**Do Not** disassemble the Yeti Infinity Link as special tools are required for proper assembly. Improper assembly can lead to damaged parts that may not function as expected which can cause loss of control of the bicycle resulting in **SERIOUS INJURY OR DEATH**.

## Servicing the Yeti Infinity Link

Servicing the Yeti Infinity Link involves injecting grease into the grease Zerk fittings. You will need a needle-style grease gun and Yeti's heavy duty grease which can be found at your local Yeti Dealer or on Yeti's website: [Yeti Grease »](#)

Different regions and riding conditions may benefit from the use of alternative greases. In all usage conditions, Heavy Duty Yeti grease will suffice.



### Step 1

Clean the exterior of your Yeti Infinity Link before performing any service. Use only isopropyl alcohol or soapy water and a clean lint free rag or paper towel to clean your Yeti Infinity Link.



### Step 2

The needle-type grease fittings of the Yeti Infinity Link require a generous push to make a proper seal while injecting grease.

Use your needle-type grease gun to inject the grease listed above until you see grease extruding from the shaft seals as shown.





### Step 3

Wipe off any extra grease that was extruded with a clean lint-free towel. No external lubrication of the shafts or seals is necessary.

Service is complete. Enjoy the ride!



 United States Worldwide

© FOX Factory, Inc. 2018  
1.800.FOX.SHOX

